

## Sol Fender Installation Instructions

**Step 1:** Slide the fender through the fork above the front tire and attach the tab to the bolt:



**Step 2:** Install the fender strut onto the clamp at the back of the fender with a 90 degree bend at the ends and evenly tighten the bolts to clamp it in place.




**Step 3:** Insert the ends of the fender struts into the plastic tabs and install them into the eyelets on the fork. The front fender is now installed on the fork.



**Step 4:** Deflate the rear tire to allow easier access to the threaded inserts in the bike frame. Slide the fender around the rear wheel. Match the mounting slots on the fender up with the threaded holes in the frame.



**Step 5:** Install the fender strut to the back of the fender and ends of the struts into the plastic mounts. Then attach the plastic mounts onto the lower set of threaded eyelets at the back of the frame.

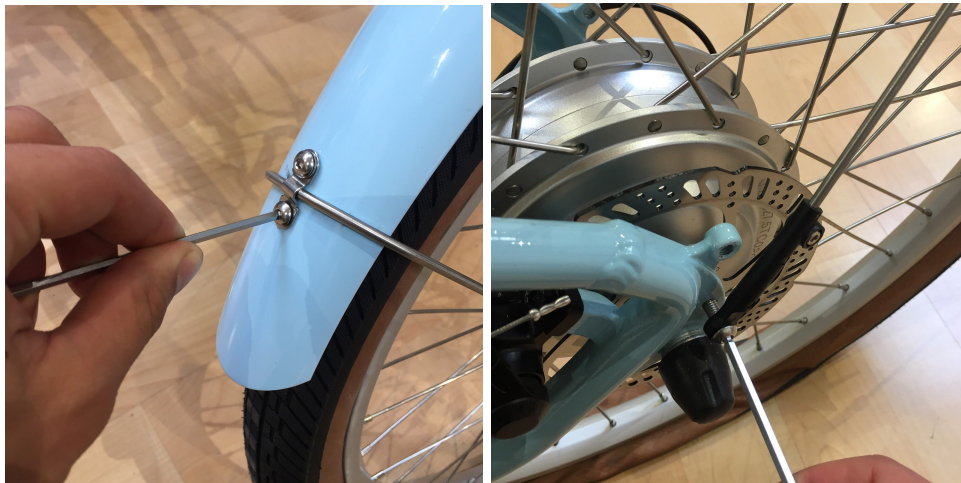

**Step 6:** Install the hardware through the fender into the two threaded eyelets in the frame as pictured. Adjust the fender struts so it does not contact the tire.

