

Vika+ Magnet Installation




Hardware (included)

Magnet Disc + threaded bolt, 2 bolts, 2 washers



Tools

10mm wrench
(included in black toolbag)

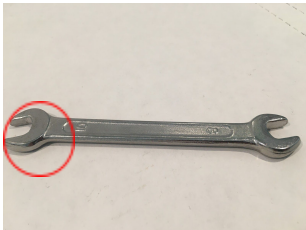

Crescent Wrench
(optional)



Instructions


1. Take out the magnetic disk from the plastic bag found in the toolkit.
2. Remove the outer nylock nut and the first washer from the threaded bolt.



Vika+ Magnet Installation



3. Locate the magnetic washer tab on the front fork.

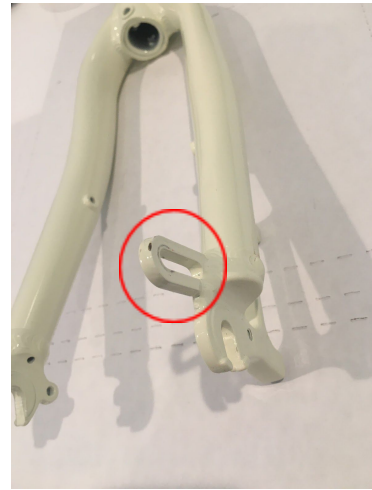

4. Insert the bolt through the tab with disk facing away from the wheel and move to the far end of the tab.

5. Install washer and nylock nut **tightening firmly** using the 10mm wrench! An adjustable wrench can help to hold the outer bolt in place. Spin the front wheel before riding to ensure the nut does not contact your brake rotor.

